

Technical information:

Initial cleaning, maintenance & cleaning

Your floor is applied with the quality oil of company WOCA
Information about you will find under <http://woca.info/>.

At worksite the floor is already proper oiled for the use.

However, after installation of the floor we recommend an **initial cleaning** with WOCA INTENSIVE CLEANER and subsequently an additional application with WOCA MAINTENANCE OIL. Corresponding instruction of use you will find at the package/ barrel or at www.woca.info/.

Daily cleaning of the floor should be done with proper vacuum cleaner or broom. Single spots on the floor can be removed with WOCA MAINTENANCE SOAP or WOCA REMOVER SPRAY.

Depend of demand and use of the floor, a regular maintenance should be done with WOCA MAINTENANCE SOAP. Kindly take the necessary information about that handling from WOCA instruction, delivered with corresponding maintenance material or take a look to www.woca.info/.

From our experience: The maintenance period in private appartments is usually approx. 1x per month, in more frequented rooms perhaps 1x a week and up to 1x a day in shops, restaurants etc.

Kindly draw your attention to the following:

- Cloth penetrated with oxidative oil (for instance WOCA Maintenance Oil) might be self-igniting. Please handle and dispose it accordingly.
- Fine dust and sand has an abrasive effect and might damage the oiled surface.
- Use only the cleaning & maintaining-material and instruction from WOCA (www.woca.info) in order not to lose the warranty of the floor.
- Don't use aggressive tools or cleaning agents.
- Protect the floor in using proper rolls at rolling chairs and appropriate components under chair & tables.
- Avoid penetration of water (additional basins beneath flower vase etc.) or direct contact to ferruous objects (for instance metall disc below the chair); dark spots or other shabby irreversible damages might be the consequence.
- The climate of the room has to be adjusted to approx. 20°C and 50± 5% humidity.
- The temperature directly on the surface of the floor should be max. 27°C. Take care also at direct sun exposure. Otherwise bigger gaps between the single boards or even cracks inside floor might occur.

A careful use of the floor will grant for a long life and satisfaction of the residents.